


POSITIONING CONTROLLER MP100 MICROPOS

Synchronous run with MP100

Functions:

- Synchronous move of all axes in automatic and jog-mode
- Separate jog-mode for each module feasible (setup operation)
- Conjoint reference run with incremental measurement systems
- Different gearbox ratios (resolution) programmable
- Working modes are selected on master conjointly
- Parameter setting and programming on master module

Set value:

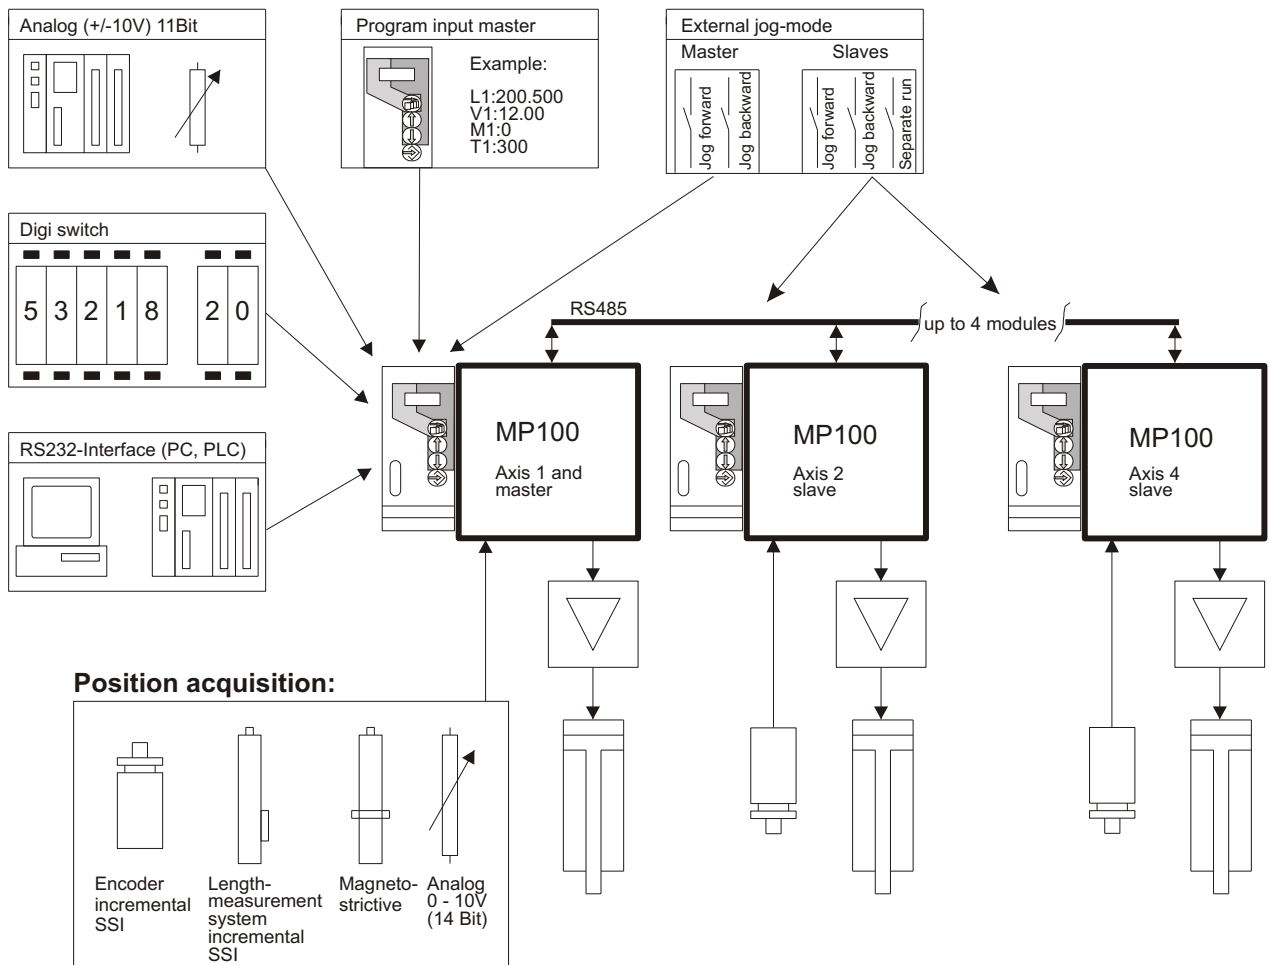

All data in this brochure have an informative character without warranty of characteristics. Changes without previous announcement reserved.